



CT200h

Gasoline-Electric

Hybrid Synergy Drive

***HYBRID VEHICLE
DISMANTLING
MANUAL***



ZWA10 Series

Foreword

This guide was developed to educate and assist dismantlers in the safe handling of Lexus CT200h gasoline-electric hybrid vehicles. CT200h dismantling procedures are similar to other non-hybrid Lexus vehicles with the exception of the high voltage electrical system. It is important to recognize and understand the high voltage electrical system features and specifications of the Lexus CT200h, as they may not be familiar to dismantlers.

High voltage electricity powers the A/C compressor, electric motor, generator, and inverter/converter. All other conventional automotive electrical devices such as the headlights, radio, and gauges are powered from a separate 12 Volt auxiliary battery. Numerous safeguards have been designed into the CT200h to help ensure the high voltage, approximately 201.6 Volt, Nickel Metal Hydride (NiMH) Hybrid Vehicle (HV) battery pack is kept safe and secure in an accident.

The NiMH HV battery pack contains sealed batteries that are similar to rechargeable batteries used in some battery operated power tools and other consumer products. The electrolyte is absorbed in the cell plates and will not normally leak out even if the battery is cracked. In the unlikely event the electrolyte does leak, it can be easily neutralized with a dilute boric acid solution or vinegar.

High voltage cables, identifiable by orange insulation and connectors, are isolated from the metal chassis of the vehicle.

Additional topics contained in the guide include:

- Lexus CT200h identification.
- Major hybrid component locations and descriptions.

By following the information in this guide, dismantlers will be able to handle CT200h-electric vehicles as safely as the dismantling of a conventional non-hybrid automobile.

© 2010 Toyota Motor Corporation

All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

Table of Contents

| | |
|--|------------------|
| <u>About the CT200h hybrid</u> | <u>1</u> |
| <u>CT200h Identification</u> | <u>2</u> |
| <u>CT200h Identification (Continued)</u> | <u>3</u> |
| <u>CT200h Identification (Continued)</u> | <u>4</u> |
| <u>CT200h Identification (Continued)</u> | <u>5</u> |
| <u>Hybrid Component Locations & Descriptions</u> | <u>6</u> |
| <u>Hybrid Component Locations & Descriptions (Continued)</u> | <u>7</u> |
| <u>Specifications</u> | <u>7</u> |
| <u>Hybrid Component Locations & Descriptions (Continued)</u> | <u>8</u> |
| <u>Hybrid Synergy Drive Operation</u> | <u>8</u> |
| <u>Vehicle Operation</u> | <u>8</u> |
| <u>Hybrid Vehicle (HV) Battery Pack and Auxiliary Battery</u> | <u>9</u> |
| <u>HV Battery Pack</u> | <u>9</u> |
| <u>Components Powered by the HV Battery Pack</u> | <u>9</u> |
| <u>Hybrid Vehicle (HV) Battery Pack and Auxiliary Battery (Continued)</u> | <u>10</u> |
| <u>HV Battery Pack Recycling</u> | <u>10</u> |
| <u>Auxiliary Battery</u> | <u>10</u> |
| <u>High Voltage Safety</u> | <u>11</u> |
| <u>High Voltage Safety System</u> | <u>11</u> |
| <u>High Voltage Safety (Continued)</u> | <u>12</u> |
| <u>Service Plug Grip</u> | <u>12</u> |
| <u>Precaution to be observed when dismantling the vehicle</u> | <u>13</u> |
| <u>Necessary Items</u> | <u>13</u> |
| <u>Spills</u> | <u>14</u> |
| <u>Dismantling the vehicle</u> | <u>15</u> |
| <u>Removal of HV battery</u> | <u>18</u> |
| <u>HV Battery Caution Label</u> | <u>29</u> |

About the CT200h hybrid


The CT200h joins the LS600h L, RX450h, HS250h and GS450h as a hybrid model for Lexus. Lexus Hybrid Drive means that the vehicle contains a gasoline engine and an electric motor for power. The two hybrid power sources are stored on board the vehicle:

1. Gasoline stored in the fuel tank for the gasoline engine.
2. Electricity stored in a high voltage Hybrid Vehicle (HV) battery pack for the electric motor.

The result of combining these two power sources is improved fuel economy and reduced emissions. The gasoline engine also powers an electric generator to recharge the battery pack; unlike a pure all electric vehicle, the CT200h never needs to be recharged from an external electric power source.

Depending on the driving conditions one or both sources are used to power the vehicle. The following illustration demonstrates how the CT200h operates in various driving modes.

- ❶ During light acceleration at low speeds, the vehicle is powered by the electric motor. The gasoline engine is shut off.
- ❷ During normal driving, the vehicle is powered mainly by the gasoline engine. The gasoline engine also powers the generator to recharge the battery pack.
- ❸ During full acceleration, such as climbing a hill, both the gasoline engine and the electric motor power the vehicle.
- ❹ During deceleration, such as when braking, the vehicle regenerates the kinetic energy from the wheels to produce electricity that recharges the battery pack.
- ❺ While the vehicle is stopped, the gasoline engine and electric motor are off, however the vehicle remains on and operational.

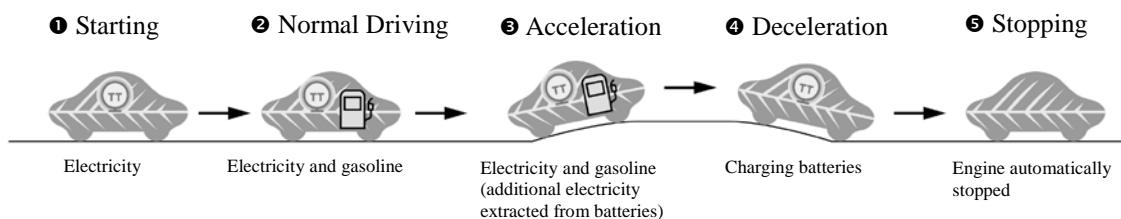


CT200h Identification

In appearance, the 2011 model year CT200h is a 5-door hatchback. Exterior, interior, and engine compartment illustrations are provided to assist in identification.

The alphanumeric 17 character Vehicle Identification Number (VIN) is provided in the front windshield cowl and on the left side B pillar.

Example VIN: JTHKD5BH000000001

A CT200h is identified by the first 8 alphanumeric characters **JTHKD5BH**.

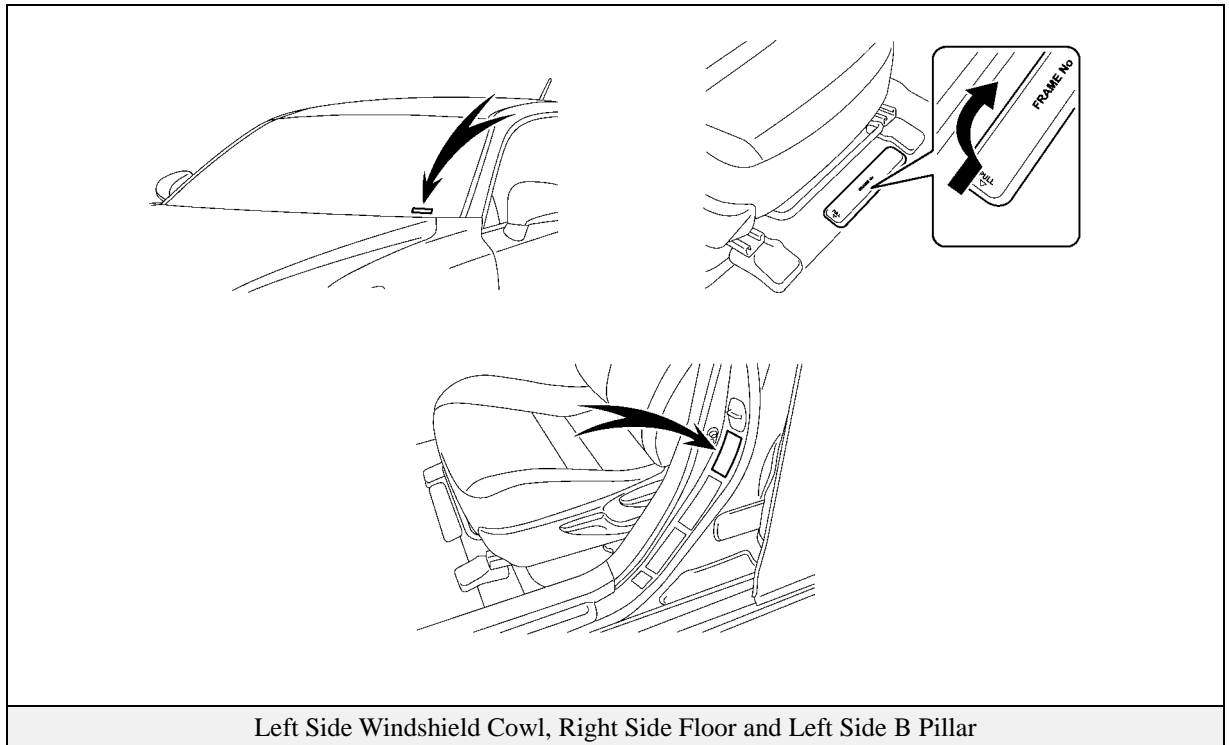

CT200h Identification (Continued)

Exterior

- ❶ CT200h logos on the hatch.
- ❷ **HYBRID** logos on the rear door moldings.
- ❸ Gasoline fuel filler door located on left side rear quarter panel.



Exterior Left Side View



Exterior Front and Rear View



Exterior Rear and Left Side View


CT200h Identification (Continued)

Interior


- ④ Instrument cluster (speedometer, power meter, **READY** light, shift position indicators, warning lights) located in the dash behind the steering wheel.

Hint:

If the vehicle is shut off, the instrument cluster gauges will be “blacked out”, not illuminated.

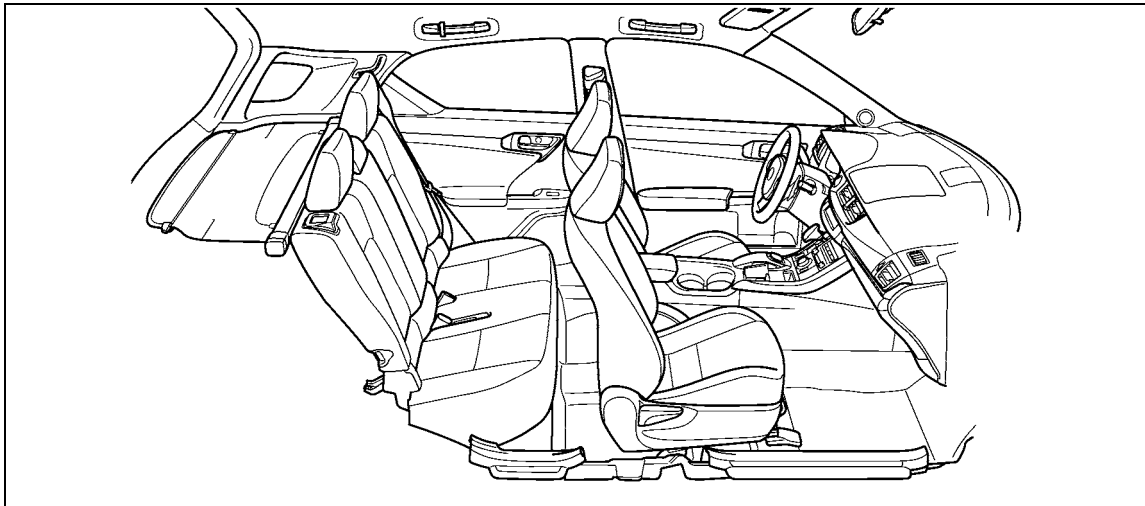

Interior View

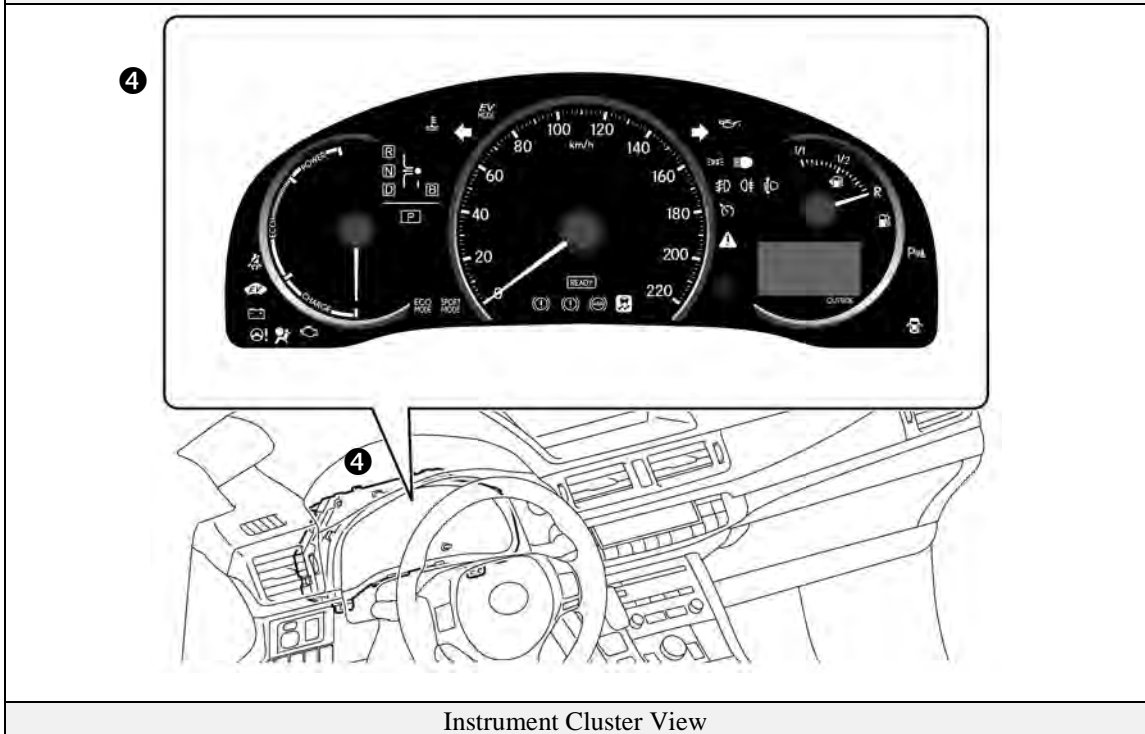


Instrument Cluster View


CT200h Identification (Continued)

Engine Compartment

- ⑤ 1.8-liter aluminum alloy gasoline engine.
- ⑥ Logo on the plastic engine cover.
- ⑦ Orange colored high voltage power cables.

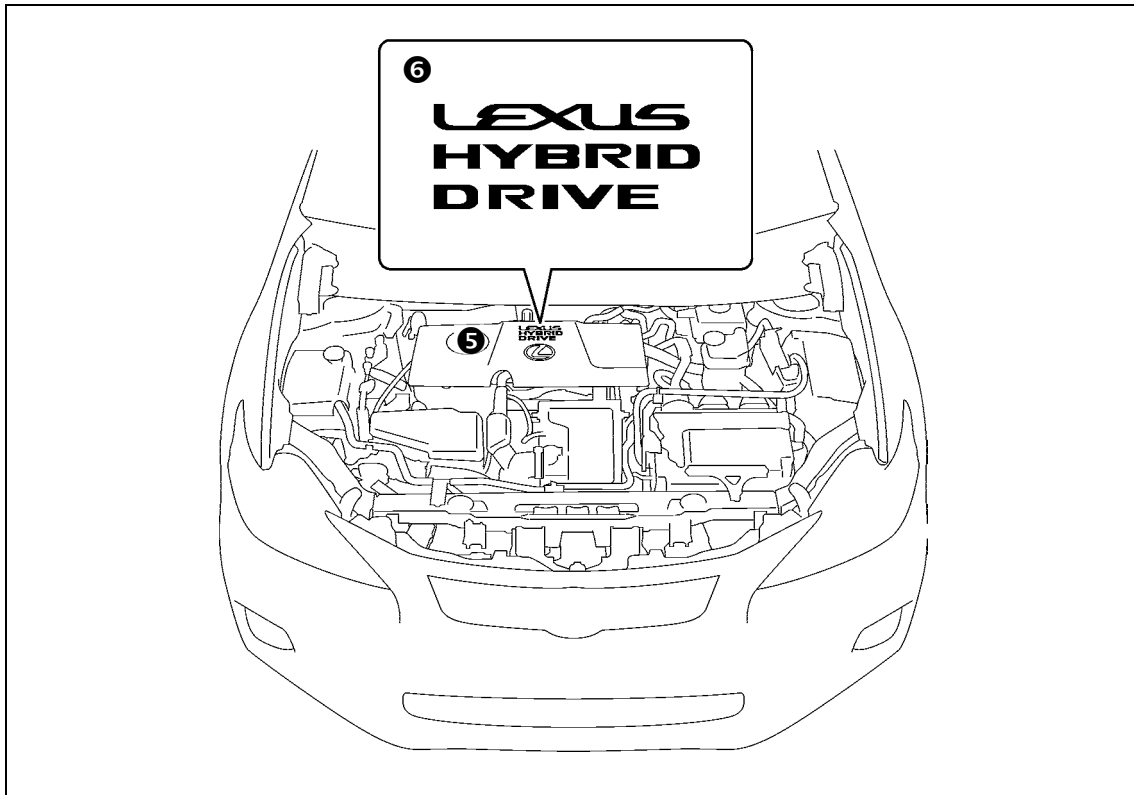

Engine Compartment View

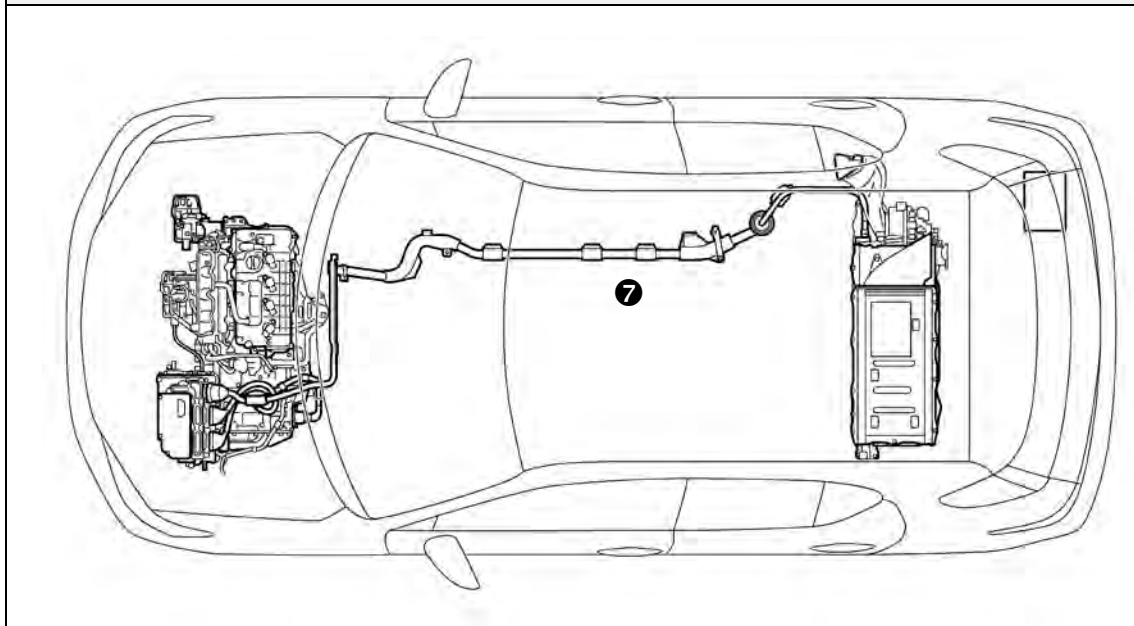

Power Cables

Hybrid Component Locations & Descriptions


| Component | Location | Description |
|------------------------------------|--|--|
| 12 Volt Auxiliary Battery ❶ | Right Side of Cargo Area | A lead-acid battery that supplies power to the low voltage devices. |
| Hybrid Vehicle (HV) Battery Pack ❷ | Cargo Area, Mounted to Cross Member behind Rear Seat | 201.6 Volt Nickel Metal Hydride (NiMH) battery pack consisting of 28 low voltage (7.2 Volt) modules connected in series. |
| Power Cables ❸ | Undercarriage and Engine Compartment | Orange colored power cables carry high voltage Direct Current (DC) between the HV battery pack, inverter/converter, and A/C compressor. These cables also carry 3-phase Alternating Current (AC) between the inverter/converter, electric motor, and generator. |
| Inverter/Converter ❹ | Engine Compartment | Boosts and inverts the high voltage electricity from the HV battery pack to 3-phase AC electricity that drives the electric motors. The inverter/converter also converts AC electricity from the electric generator and electric motors (regenerative braking) to DC that recharges the HV battery pack. |
| Gasoline Engine ❺ | Engine Compartment | Provides two functions: 1) Powers vehicle. 2) Powers generator to recharge the HV battery pack. The engine is started and stopped under control of the vehicle computer. |
| Electric Motor ❻ | Engine Compartment | 3-phase high voltage AC permanent magnet electric motor contained in the front transaxle. It is used to power the front wheels. |
| Electric Generator ❼ | Engine Compartment | 3-phase high voltage AC generator that is contained in the transaxle and recharges the HV battery pack. |
| A/C Compressor (with Inverter) ❸ | Engine Compartment | 3-phase high voltage AC electrically driven motor compressor. |
| Fuel Tank and Fuel Line ❾ | Undercarriage and Center | The fuel tank provides gasoline via a fuel line to the engine. The fuel line is routed under the center of vehicle. |

*Numbers in the component column apply to the illustrations on the following page.

Hybrid Component Locations & Descriptions (Continued)

Specifications

- Gasoline Engine: 98 hp (73 kW), 1.8-liter Aluminum Alloy Engine
- Electric Motors 80 hp (60 kW), Permanent Magnet Motor
- Transmission: Automatic Only (electrically controlled continuously variable transaxle)
- HV Battery: 201.6 Volt Sealed NiMH-Battery
- Curb Weight: 3,230 lbs/1,465 kg
- Fuel Tank: 11.9 gals/45.0 liters
- Frame Material: Steel Unibody
- Body Material: Steel Panels except for Aluminum Hood and Hatch
- Seating Capacity: 5 standard

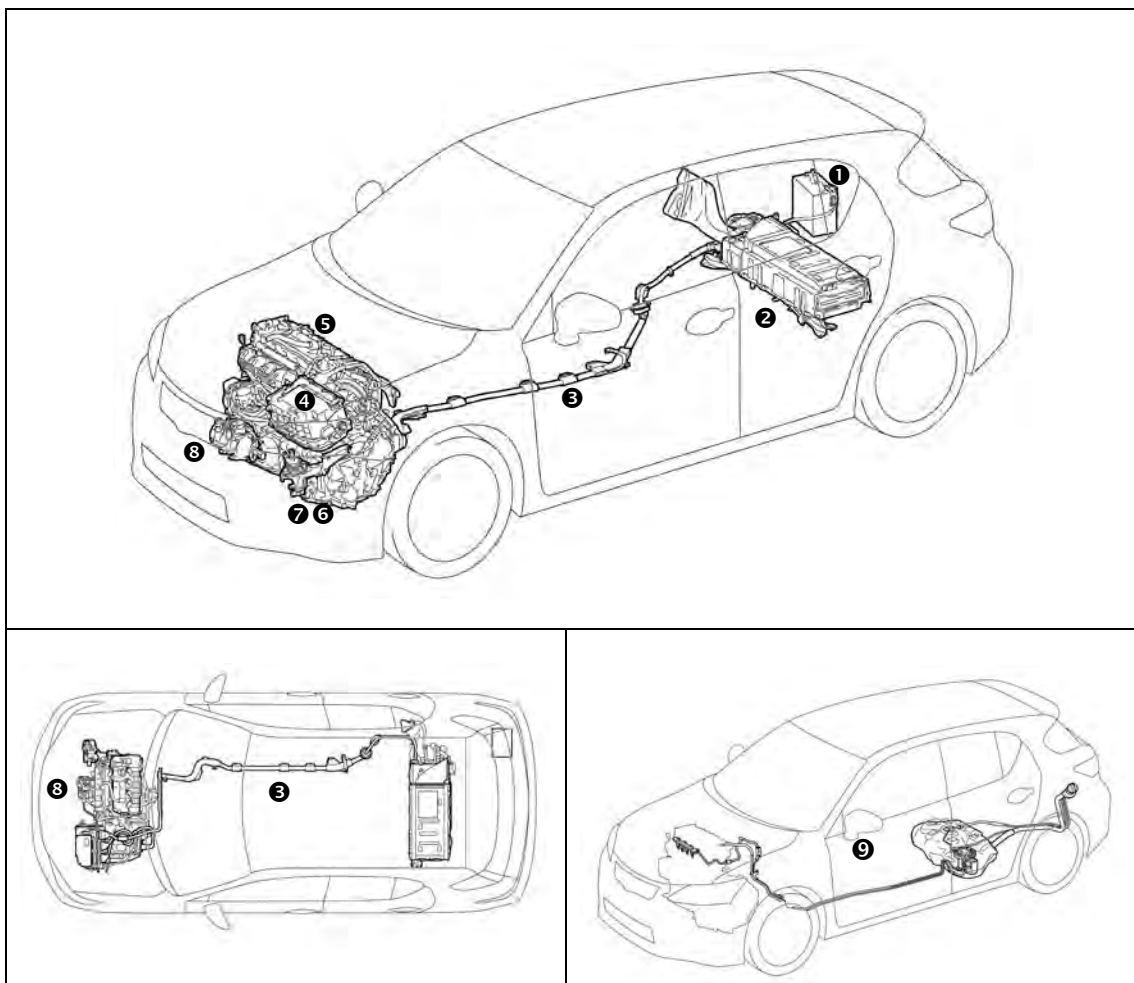

Hybrid Component Locations & Descriptions (Continued)

Hybrid Synergy Drive Operation


Once the **READY** indicator is illuminated in the instrument cluster, the vehicle may be driven. However, the gasoline engine does not idle like a typical automobile and will start and stop automatically. It is important to recognize and understand the **READY** indicator provided in the instrument cluster. When illuminated, it informs the driver that the vehicle is on and operational even though the gasoline engine may be off and the engine compartment is silent.

Vehicle Operation

- With the CT200h, the gasoline engine may stop and start at any time while the **READY** indicator is on.
- Never assume that the vehicle is shut off just because the engine is off. Always look for the **READY** indicator status. The vehicle is shut off when the **READY** indicator is off.

The vehicle may be powered by:

1. The electric motor only.
2. The gasoline engine only.
3. A combination of both the electric motor and the gasoline engine.

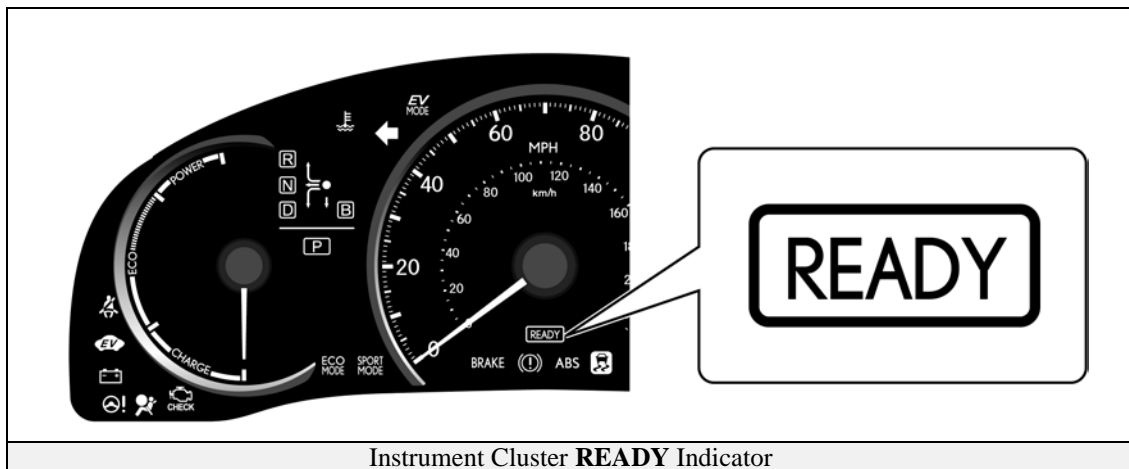

Hybrid Vehicle (HV) Battery Pack and Auxiliary Battery

The CT200h features a high voltage Hybrid Vehicle (HV) battery pack that contains sealed Nickel Metal Hydride (NiMH) battery modules.

HV Battery Pack

- The HV battery pack is enclosed in a metal case and is rigidly mounted to the cargo area floor pan cross member behind the rear seat. The metal case is isolated from high voltage and concealed by carpet in the cabin area.
- The HV battery pack consists of 28 low voltage (7.2 Volt) NiMH battery modules connected in series to produce approximately 201.6 Volts. Each NiMH battery module is non-spillable and in a sealed case.
- The electrolyte used in the NiMH battery module is an alkaline mixture of potassium and sodium hydroxide. The electrolyte is absorbed into the battery cell plates and will not normally leak, even in a collision.

| HV Battery Pack | |
|--|--|
| Battery pack voltage | 201.6 V |
| Number of NiMH battery modules in the pack | 28 |
| NiMH battery module voltage | 7.2 V |
| NiMH battery module dimensions | 11.2 x 0.8 x 4.6 in (285 x 19.6 x 117.8 mm) |
| NiMH module weight | 2.3 lbs (1.04 kg) |
| NiMH battery pack dimensions | 15 x 40 x 9 in (387 x 1011 x 225 mm) |
| NiMH battery pack weight | 90 lbs (41 kg) |

Components Powered by the HV Battery Pack

- Electric Motor
- Inverter/Converter
- Power Cables
- A/C Compressor
- Electric Generator


Hybrid Vehicle (HV) Battery Pack and Auxiliary Battery (Continued)

HV Battery Pack Recycling

- The HV battery pack is recyclable. Contact either your Lexus Distributor as mentioned on HV battery Caution Label (see page 29) or the nearest Lexus dealer.

Auxiliary Battery

- The CT200h also contains a lead-acid 12 Volt battery. This 12 Volt auxiliary battery powers the vehicle electrical system similar to a conventional vehicle. As with other conventional vehicles, the auxiliary battery is grounded to the metal chassis of the vehicle.
- The auxiliary battery is located in the cargo area. It is concealed by a fabric cover on the passenger side in the rear quarter panel well.

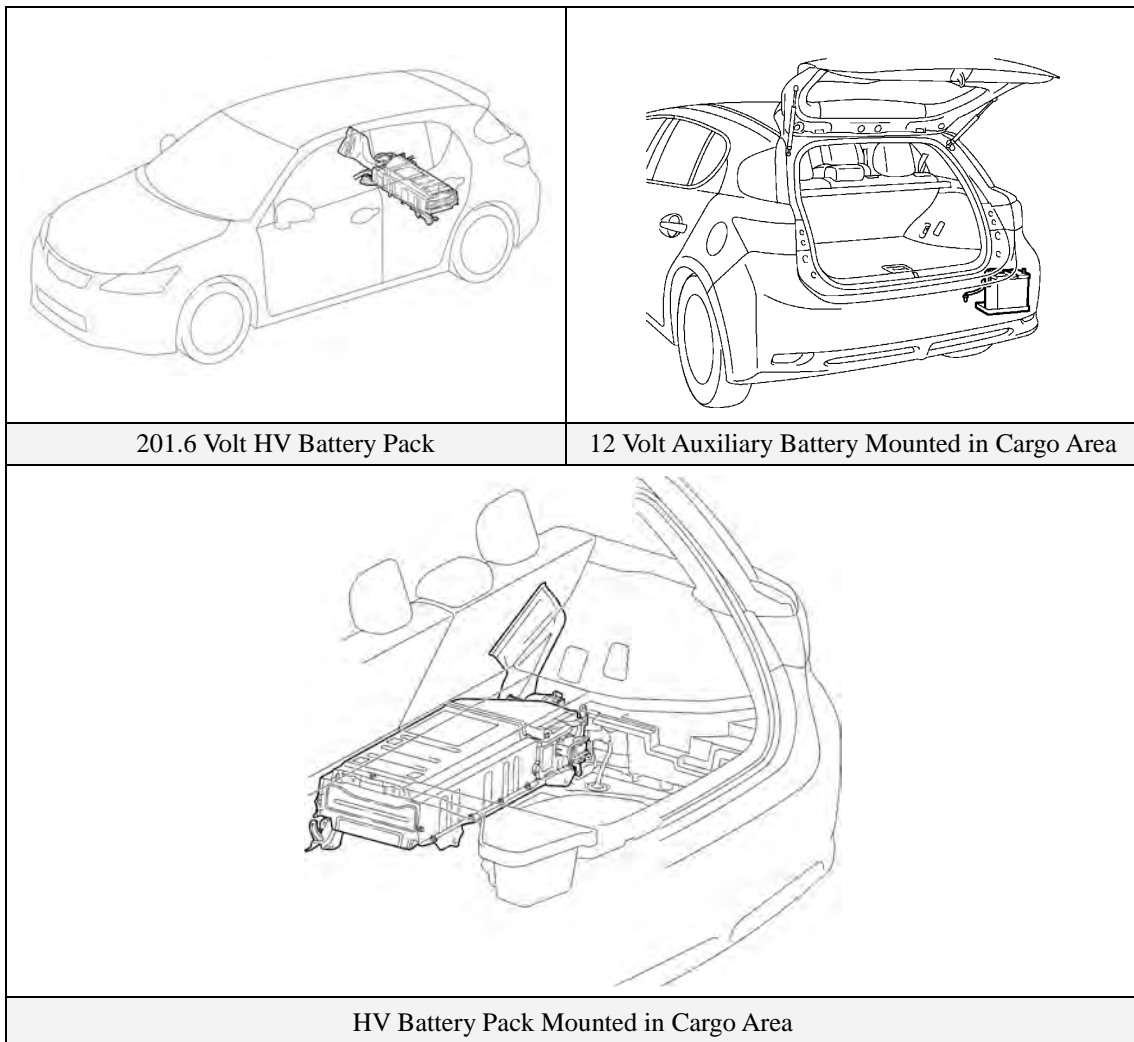

High Voltage Safety

The HV battery pack powers the high voltage electrical system with DC electricity. Positive and negative orange colored high voltage power cables are routed from the battery pack, under the vehicle floor pan, to the inverter/converter. The inverter/converter contains a circuit that boosts the HV battery voltage from 201.6 to 650 Volts DC. The inverter/converter creates 3-phase AC to power the motors. Power cables are routed from the inverter/converter to each high voltage motor (electric motor, electric generator, and A/C compressor). The following systems are intended to help keep occupants in the vehicle and emergency responders safe from high voltage electricity:


High Voltage Safety System

- A high voltage fuse ❶* provides short circuit protection in the HV battery pack.
- Positive and negative high voltage power cables ❷* connected to the HV battery pack are controlled by 12 Volt normally open relays ❸*. When the vehicle is shut off, the relays stop electricity flow from leaving the HV battery pack.



WARNING:

- ***The high voltage system may remain powered for up to 10 minutes after the vehicle is shut off or disabled. To prevent serious injury or death from severe burns or electric shock, avoid touching, cutting, or opening any orange high voltage power cable or high voltage component.***


- Both positive and negative power cables ❷* are insulated from the metal chassis, so there is no possibility of electric shock when touching the metal chassis.
- A ground-fault monitor continuously monitors for high voltage leakage to the metal chassis while the vehicle is running. If a malfunction is detected, the hybrid vehicle computer ❹* will illuminate the master warning light  in the instrument cluster and indicate “CHECK HYBRID SYSTEM” on the multi-information display.
- The HV battery pack relays will automatically open to stop electricity flow in a collision sufficient to activate the SRS.

*Numbers apply to the illustration on the following page.


High Voltage Safety (Continued)

Service Plug Grip

- The high-voltage circuit is cut by removing the service plug grip (see page 15).

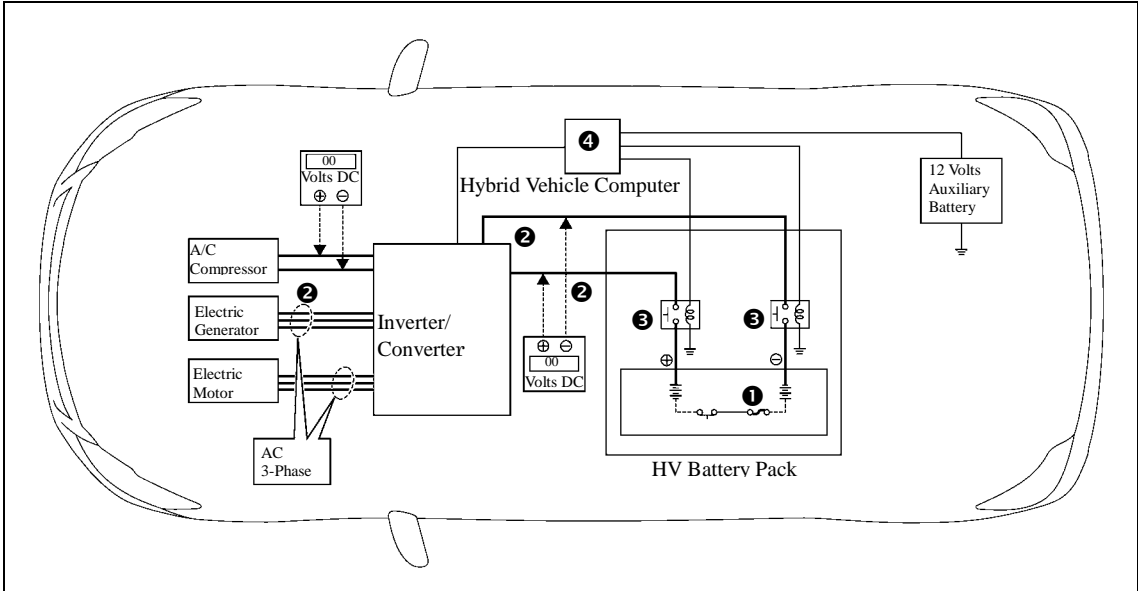

High Voltage Safety System – Vehicle Shut Off (**READY-OFF**)

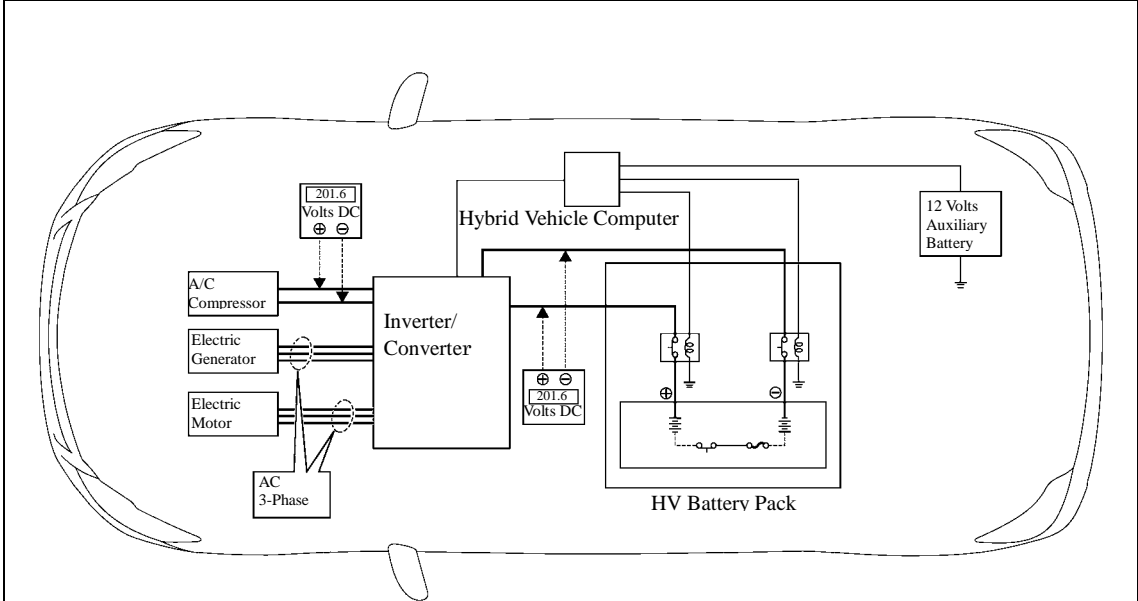

High Voltage Safety System – Vehicle On and Operational (**READY-ON**)

Precaution to be observed when dismantling the vehicle



WARNING:

- *The high voltage system may remain powered for up to 10 minutes after the vehicle is shut off or disabled. To prevent serious injury or death from severe burns or electric shock, avoid touching, cutting, or opening any orange high voltage power cable or high voltage component.*

Necessary Items

- Protective clothing such as insulated gloves (electrically insulated), rubber gloves, safety goggles, and safety shoes.
- Insulating tape such as electrical tape that has a suitable electrical insulation rating.
- Before wearing insulated gloves, make sure that they are not cracked, ruptured, torn, or damaged in any way. Do not wear wet insulated gloves.
- An electrical tester that is capable of measuring DC 750 Volts or more.

Spills

The CT200h contains the same common automotive fluids used in other non-hybrid Lexus vehicles, with the exception of the NiMH electrolyte used in the HV battery pack. The NiMH battery electrolyte is a caustic alkaline (pH 13.5) that is damaging to human tissues. The electrolyte, however, is absorbed in the cell plates and will not normally spill or leak out even if a battery module is cracked. A catastrophic crash that would breach both the metal battery pack case and a metal battery module would be a rare occurrence.

A caustic alkaline is at the opposite end of the pH scale from a strong acid. A safe (neutral) substance is approximately in the middle of this scale. Adding a weak acidic mixture, such as a dilute boric acid solution or vinegar, to the caustic alkaline electrolyte will cause the electrolyte to be neutralized. This is similar but opposite to the use of baking soda to neutralize a lead-acid battery electrolyte spill.

A Toyota Material Safety Data Sheets (MSDS) is attached to this document.

- Handle NiMH electrolyte spills using the following Personal Protective Equipment (PPE):
 - Splash shield or safety goggles. A fold down face shield is not acceptable for acid or electrolyte spills.
 - Rubber, latex or nitrile gloves.
 - Apron suitable for alkaline.
 - Rubber boots.

- Neutralize NiMH electrolyte.
 - Use a boric acid solution or vinegar.
 - Boric acid solution - 800 grams boric acid to 20 liters water or 5.5 ounces boric acid to 1 gallon of water.

Dismantling the vehicle

The following 2 pages contain general instructions for use when working on a CT200h. Read these instructions before proceeding to the HV battery removal instructions on page 18.




WARNING:

- **The high voltage system may remain powered for up to 10 minutes after the vehicle is shut off or disabled. To prevent serious injury or death from severe burns or electric shock, avoid touching, cutting, or opening any orange high voltage power cable or any high voltage component.**

1. Shut off the ignition (**READY** indicator is off). Then disconnect the cable from the auxiliary battery negative (-) terminal.

- (1) Remove the center deck board.
- (2) Remove the center auxiliary box and battery cover.
- (3) Disconnect the battery negative terminal.

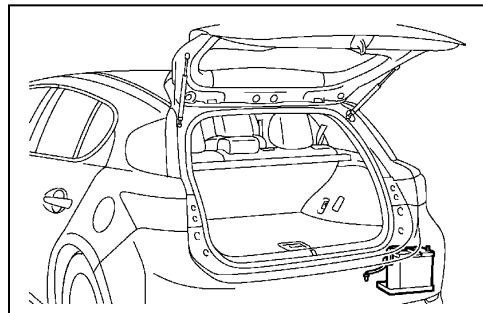


2. Remove the service plug grip.

Caution:

Wear insulated gloves for the following 3 steps.


- (1) Slide the handle of the service plug grip to the left.
- (2) Raise the release handle of the service plug grip
- (3) Remove the service plug grip.
- (4) Apply insulating tape to the socket of the service plug grip to insulate it.

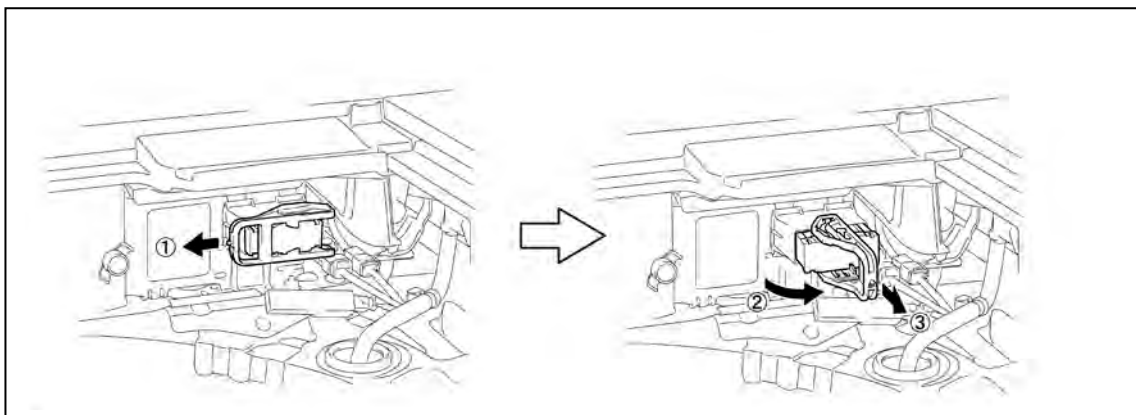


3. Carry the removed service plug grip in your pocket to prevent other staff from accidentally reinstalling it while you are dismantling the vehicle.
4. Make other staff aware that a high-voltage system is being dismantled by using the following sign: CAUTION: HIGH-VOLTAGE. DO NOT TOUCH (see page 17).
5. If the service plug grip cannot be removed due to damage to the vehicle, remove the **IGCT** fuse (30A) and **AM2** fuse (7.5A).

Caution:

This operation shuts off the HV system. Be sure to wear insulated gloves because high voltage is not shut off inside the HV battery. When it is possible to remove the service plug grip, remove it and continue the procedure.

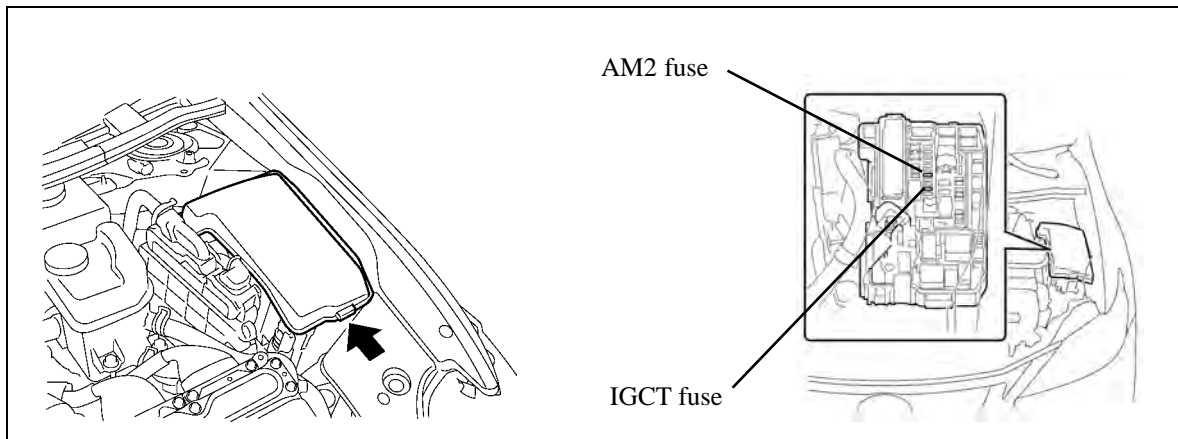

6. After disconnecting or exposing a high-voltage connector or terminal, insulate it immediately using insulating tape. Before disconnecting or touching a bare high-voltage terminal, wear insulated gloves.
7. Check the HV battery and nearby area for leakage. If you find any liquid, it may be strong alkaline electrolyte. Wear rubber gloves and goggles and neutralize the liquid using a saturated boric acid solution or vinegar. Then wipe up the liquid using waste rags etc.

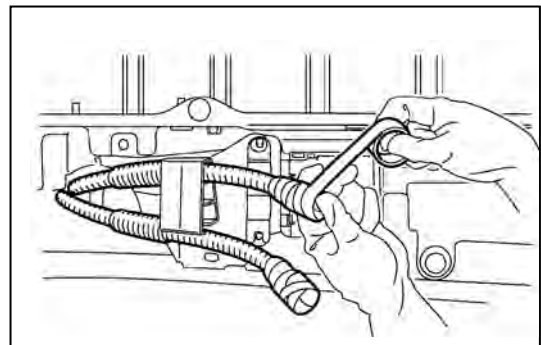

8. If the electrolyte comes into contact with your skin, wash the skin immediately using a saturated boric acid solution or a large amount of water. If the electrolyte adheres to any article of clothing, take the clothing off immediately.
9. If the electrolyte comes into contact with your eye(s), call out loudly for help. Do not rub your eye(s). Instead, wash the eye(s) with a dilute boric acid solution or a large amount of water and seek medical care.
10. With the exception of the HV battery, remove parts by following procedures which are similar to conventional Toyota vehicles. For the removal of the HV battery, refer to the following pages.

Person in charge: _____

CAUTION:
HIGH-VOLTAGE.
DO NOT TOUCH.

CAUTION:
HIGH-VOLTAGE.
DO NOT TOUCH.

Person in charge: _____

When performing work on the HV system, fold this sign and
put it on the roof of the vehicle.



Removal of HV battery




WARNING:

- *Be sure to wear insulated gloves when handling high-voltage parts.*
- *Even if the vehicle is shut off and the relays are off, be sure to remove the service plug grip before performing any further work.*
- *Power remains in the high voltage electrical system for 10 minutes even after the HV battery pack is shut off because the circuit has a condenser that stores power.*
- *Make sure that the tester reading is 0 V before touching any high-voltage terminals which are not insulated.*
- *The SRS may remain powered for up to 90 seconds after the vehicle is shut off or disabled. To prevent serious injury or death from unintentional SRS deployment, avoid cutting the SRS components.*

1. SHUT OFF IGINATION (**READY** indicator is off).
2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)
3. REMOVE 12 V AUXILIARY BATTERY
 - (1) Remove the rear No. 2 floor board.
 - (2) Remove the rear deck floor box.
 - (3) Remove the clip and disengage the 6 guides, and remove the deck floor box RH.
 - (4) Remove the battery cover.

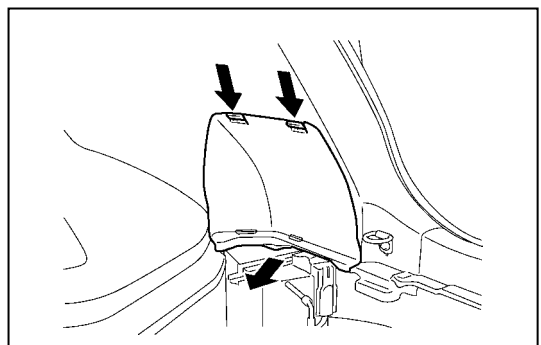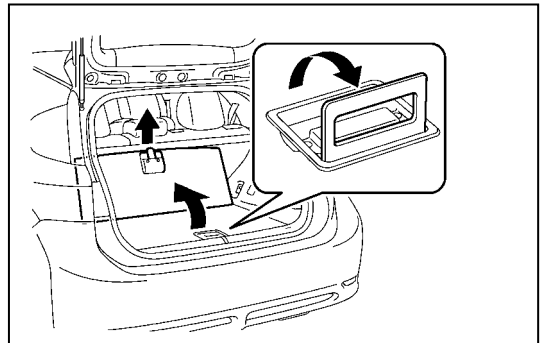

- (5) Disconnect the cable from the auxiliary battery negative (-) terminal.
- (6) Disconnect the cable from the auxiliary battery positive (+) terminal.
- (7) Remove the 12volt auxiliary battery.


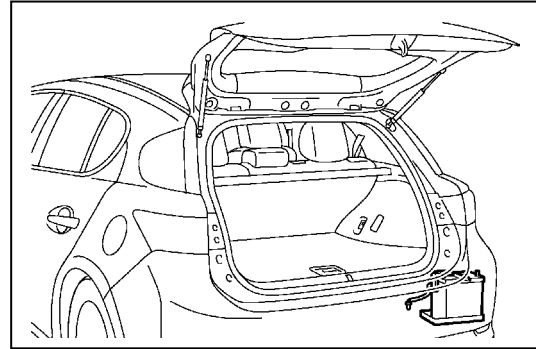


4. REMOVE SERVICE PLUG GRIP

Caution:


Wear insulated gloves for the following 3 steps.

- (1) Slide the handle of the service plug grip to the left.
- (2) Raise the release handle of the service plug grip as shown in the illustration below.
- (3) Remove the service plug grip.

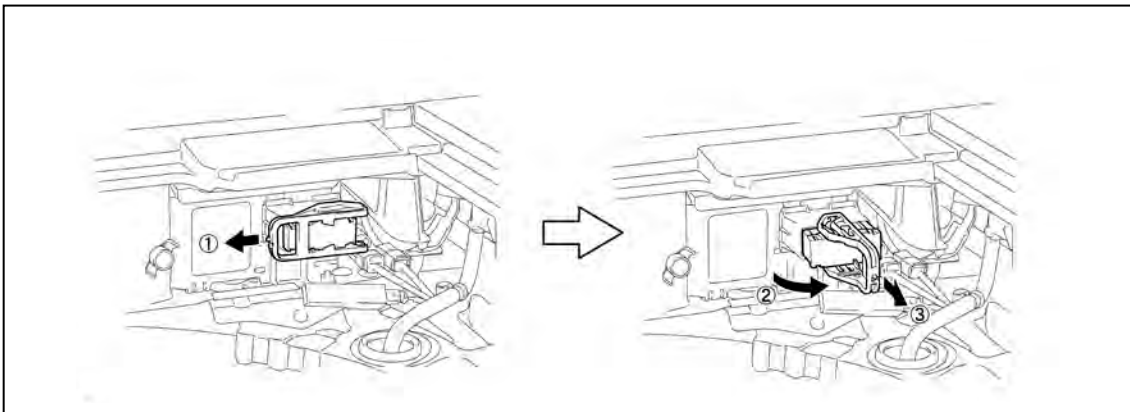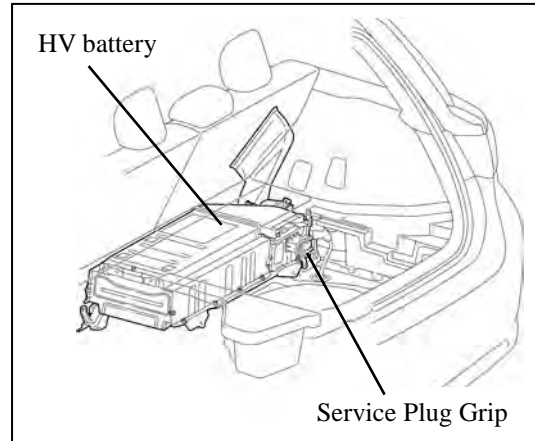

- (4) Apply insulating tape to the socket of the service plug grip to insulate it.

5. REMOVE 9 BOLTS AND INVERTER TERMINAL COVER

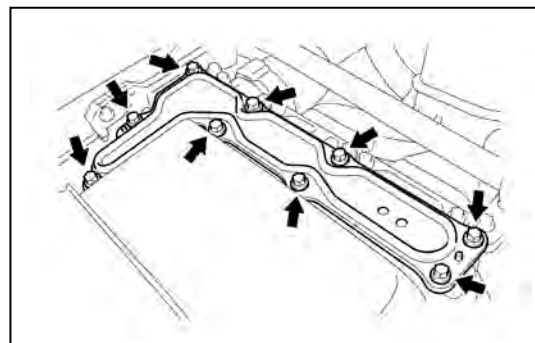

6. CHECK TERMINAL VOLTAGE

- (1) Check voltage at the terminals in inspection point in the power control unit.

Caution:

Wear insulated gloves.


To prevent serious injury or death, do not proceed with dismantling of the HV system until the voltage at the terminals in the inspection point is 0 V.

Standard voltage: 0 V

Hint:

Set the tester to DC 750 Volts measure the voltage.


This inspection is performed to verify that it is safe to remove the HV battery.

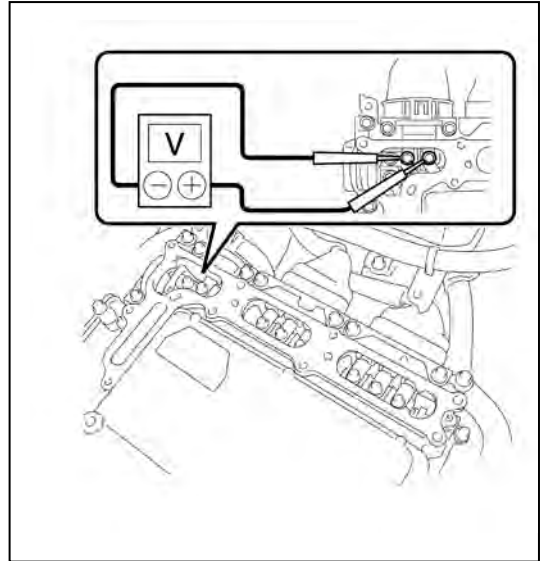

7. CUT REAR CENTER SEATBELT


8. REMOVE REAR NO. 4 FLOOR BOARD

- (1) Remove the rear No. 4 floor board. (w/o Woofer)
- (2) Disengage the 2 clips and 3 guides, and remove the rear No. 4 floor board. (w/ Woofer)

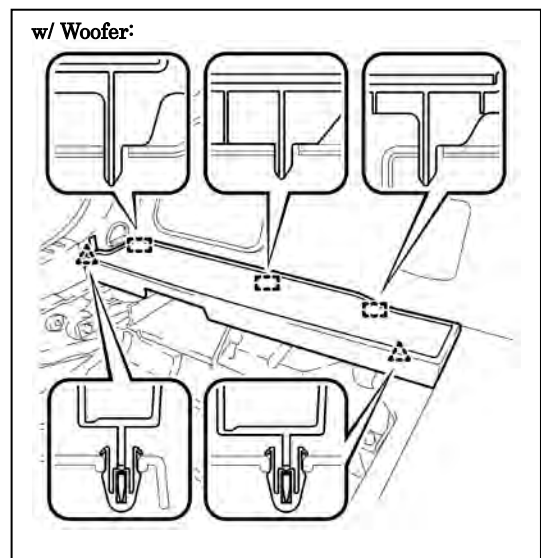


9. REMOVE DECK FLOOR BOX LH (w/o Woofer)

- (1) Remove the clip.
- (2) Disengage the 6 guides and remove the deck floor box LH.

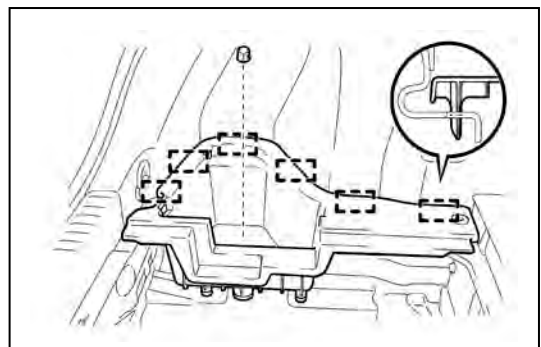


10. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY

- (1) Disengage the 2 claws and 2 clips, and remove the rear No. 1 floor board sub-assembly.

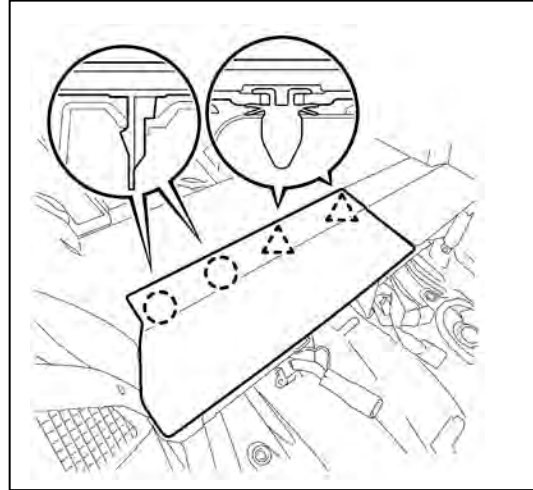


11. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY

- (1) Disengage the claw and 2 clips, and remove the rear No. 2 floor board sub-assembly.

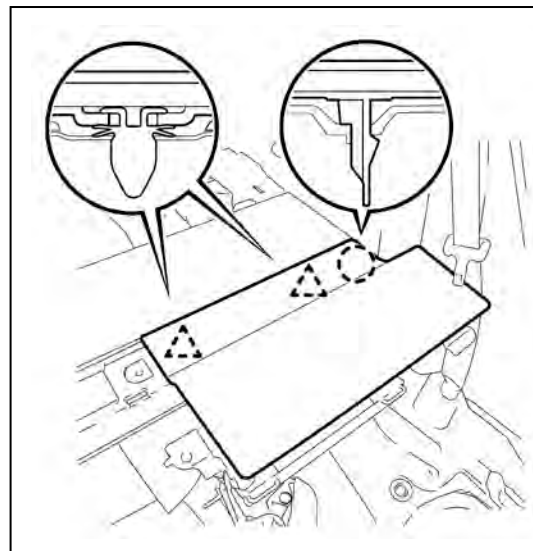


12. REMOVE REAR NO. 1 FLOOR BOARD

- (1) Remove the bolt.
- (2) Disengage the 2 claws and 2 clips, and remove the rear No. 1 floor board.

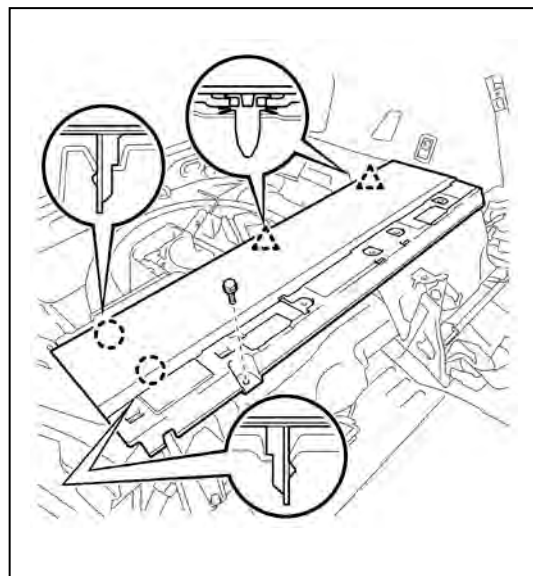


13. REMOVE REAR SEAT CUSHION ASSEMBLY

- (1) Disengage the 2 hooks of the seat cushion from the vehicle body as shown in the illustration.
- (2) Disengage the 2 guides of the seat cushion from the seatback.
- (3) Remove the rear seat cushion assembly.

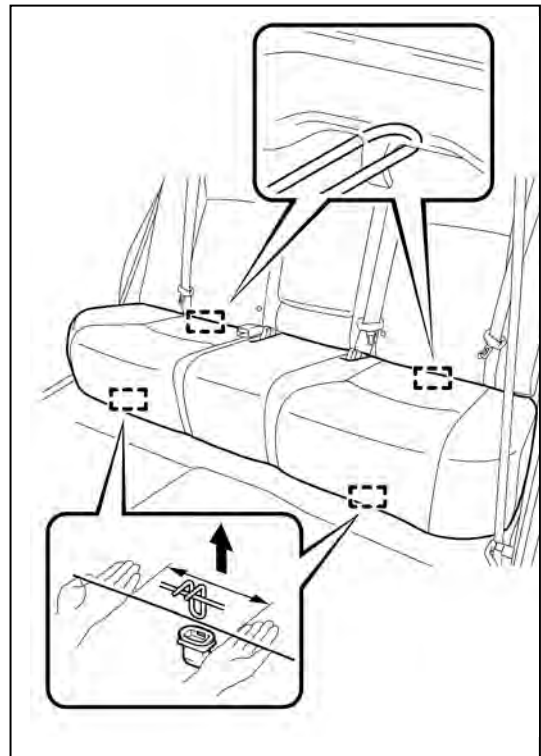


14. REMOVE REAR SEATBACK ASSEMBLY RH

- (1) Remove the 2 bolts and rear seatback assembly RH.

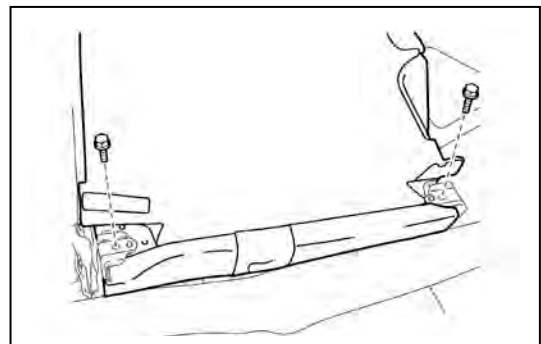

15. REMOVE REAR SEATBACK ASSEMBLY LH

- (1) Remove the 2 bolts and rear seatback assembly LH.

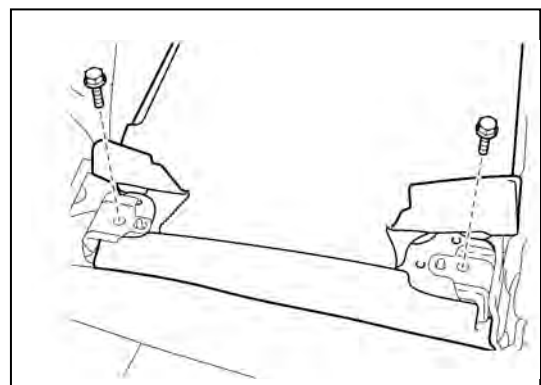


16. REMOVE REAR DOOR SCUFF PLATE LH

- (1) Disengage the 4 claws, 2 guide and 2 clips, and remove the rear door scuff plate LH.

17. REMOVE REAR DOOR SCUFF PLATE RH

Hint:

- Use the same procedure described for the LH side.

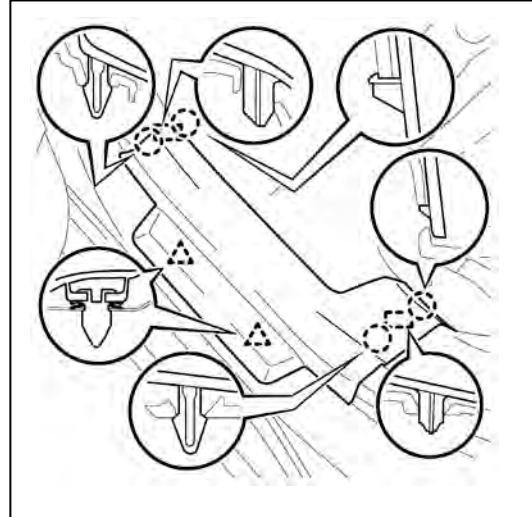

18. REMOVE REAR SEAT SIDE GARNISH

LH


- (1) Remove the clip.
- (2) Disengage the 6 claws and remove the rear seat side garnish LH.

19. REMOVE REAR SEAT SIDE GARNISH

RH


Hint:

- Use the same procedure described for the LH side.

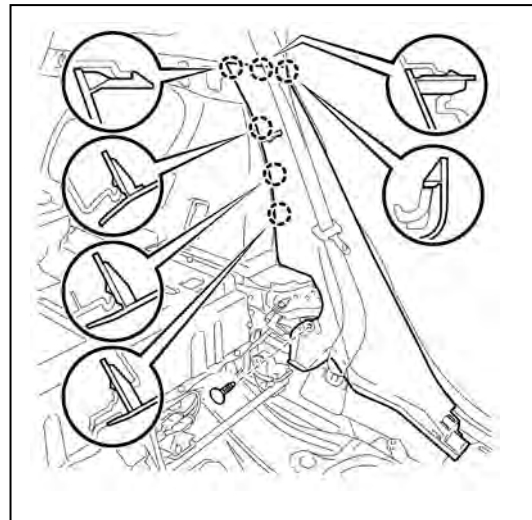


20. REMOVE HYBRID VEHICLE BATTERY SHIELD SHEET

- (1) Remove the hybrid vehicle battery shield sheet.

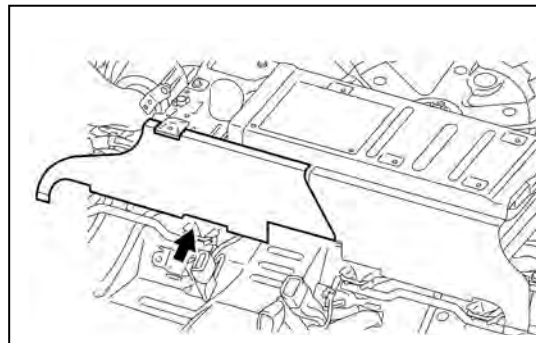


21. REMOVE HYBRID BATTERY COVER SHEET

- (1) Remove the hybrid battery cover sheet.

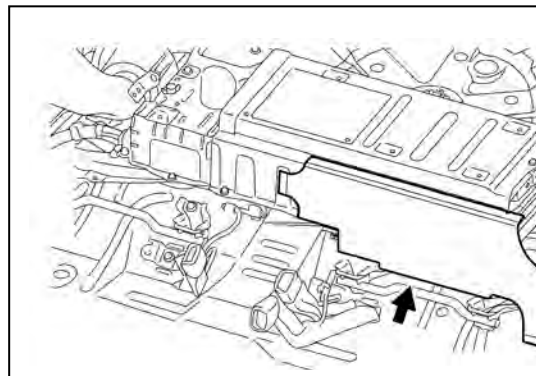


22. REMOVE REAR FLOOR BOARD SPACER

- (1) Remove the 2 clips and rear floor board spacer.

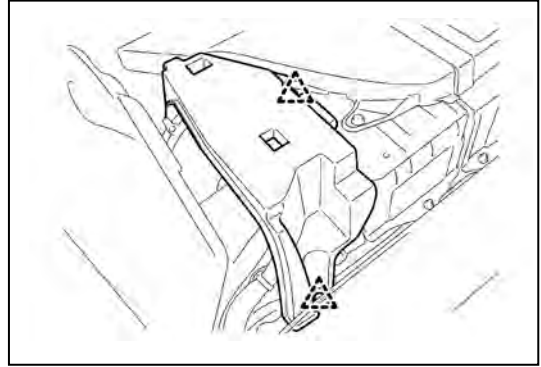

23. REMOVE NO. 1 HYBRID BATTERY INTAKE DUCT

- (1) Remove the No. 2 HV battery carrier sheet and No. 3 HV battery carrier sheet.

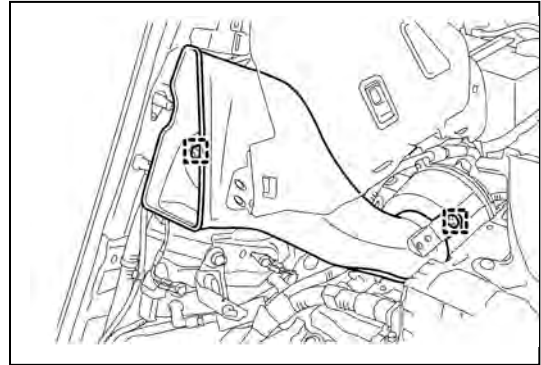


24. REMOVE BATTERY COOLING BLOWER ASSEMBLY


Notice:

- Be sure not to touch the fan part of the battery cooling blower assemblies.
- Do not lift the battery cooling blower assemblies using the wire harness.


- (1) Disconnect the 2 wire harness clamps.

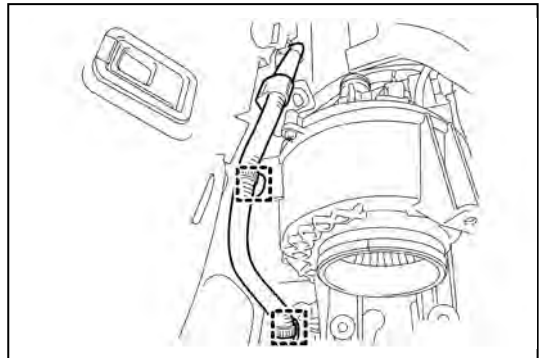

- (2) Disconnect the battery cooling blower assembly connector and clamp.

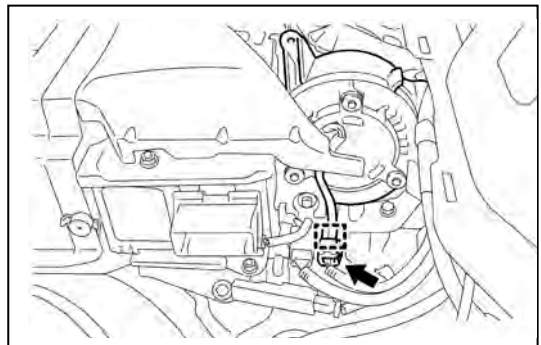


- (3) Remove the 2 bolts, nut and battery cooling blower assembly.

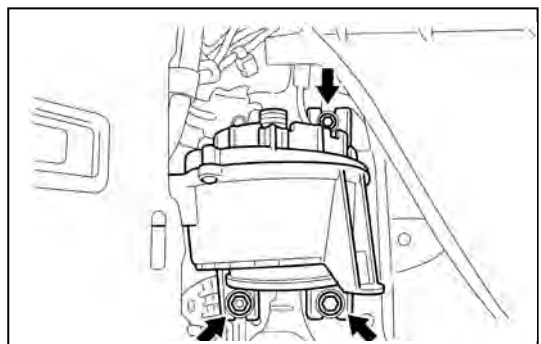

25. REMOVE NO. 1 HYBRID BATTERY EXHAUST DUCT

- (1) Remove the clip and No. 1 hybrid battery exhaust duct.

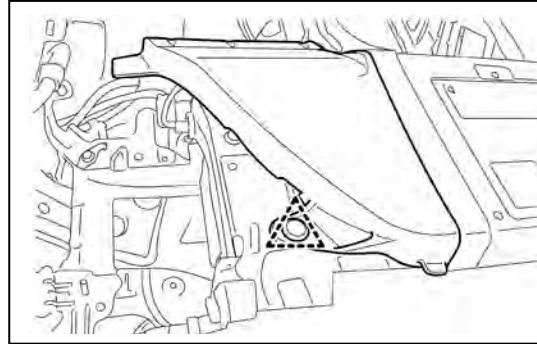

26. REMOVE UPPER HYBRID BATTERY COVER SUB-ASSEMBLY

Caution:


Wear insulated gloves for the following 2 steps.

- (1) Remove the clip and No. 1 hybrid battery exhaust duct.

Hint:

Insert the projecting part of the service plug grip and turn the button of the battery cover lock striker counterclockwise to release the lock.

- (2) Remove the 4 nuts and upper hybrid battery cover sub-assembly.

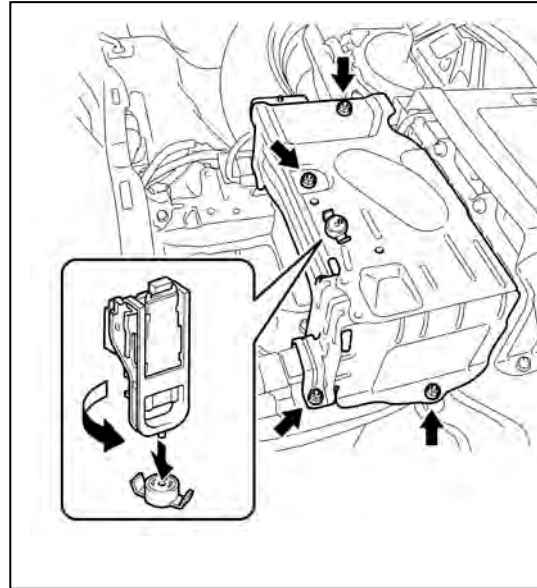

27. REMOVE FRAME WIRE


Caution:

Wear insulated gloves.

Notice:

Insulate the terminals of the removed frame wire with insulating tape.

- (1) Remove the 2 nuts, then disconnect the frame wire from the hybrid battery junction block.
- (2) Disconnect the clamp and frame wire.

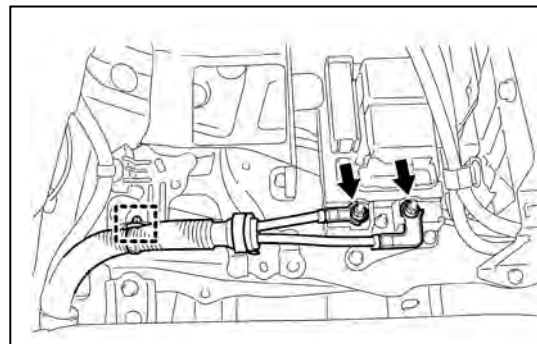

28. REMOVE HYBRID BATTERY JUNCTION BLOCK



Caution:

Wear insulated gloves.


Notice:

**Insulate the terminals of the removed
frame wire with insulating tape.**

- (1) Disconnect the 2 connectors from the hybrid battery junction block.
- (2) Disconnect the 2 connectors from the hybrid battery junction block.

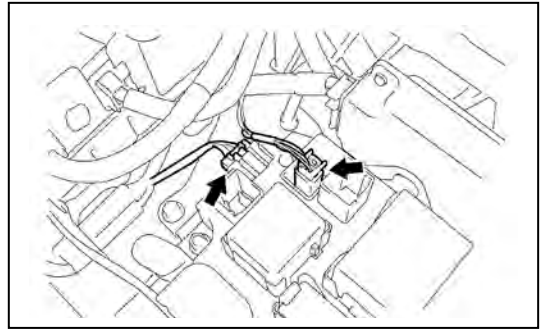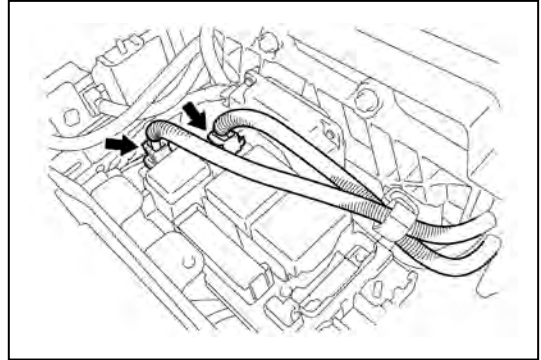


- (3) Remove the 3 nuts and hybrid battery junction block.

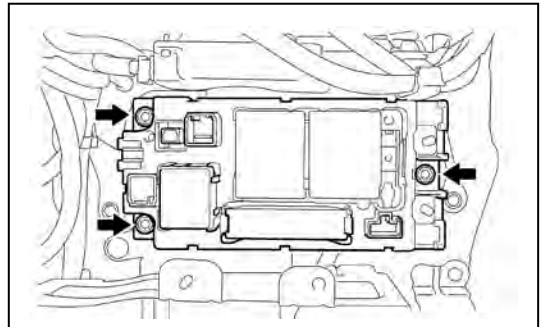


29. REMOVE NO. 7 HYBRID VEHICLE BATTERY UPPER CARRIER BRACKET

- (1) Disconnect the 2 wire harness clamps.
- (2) Remove the bolt and No. 7 hybrid battery upper carrier bracket.

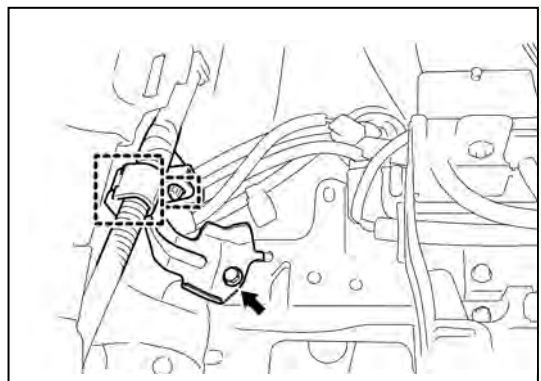


30. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY LH

- (1) Remove the 2 bolts and child restraint seat anchor bracket sub-assembly LH.

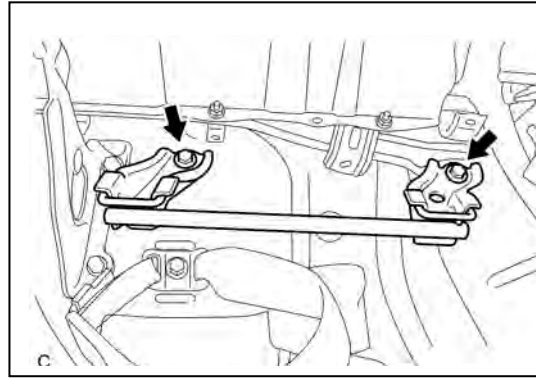


31. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY RH

- (1) Disconnect the wire harness protector clamp.
- (2) Remove the 2 bolts and child restraint seat anchor bracket sub-assembly RH.

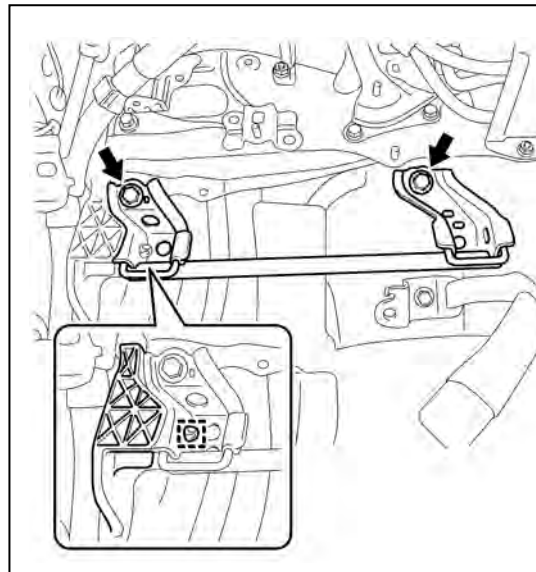

32. REMOVE REAR CENTER SEAT BACK HINGE SUB-ASSEMBLY

- (1) Remove the 2 bolts and center seat hinge sub-assembly.

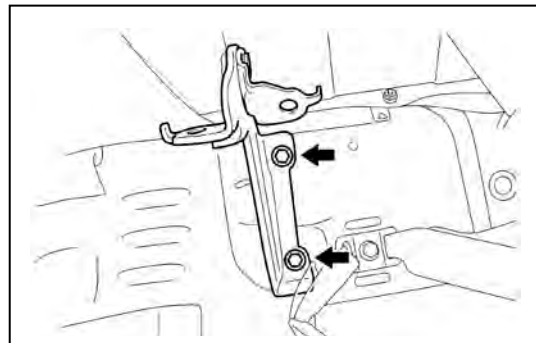

33. REMOVE HV BATTERY ASSEMBLY.

Caution:



Wear insulated gloves.

Notice:

Since the HV battery is very heavy, 2 people are needed to remove the HV battery. When removing the HV battery, do not damage the parts around it.

- (1) Remove the hybrid battery carrier sheet No. 2.
- (2) Remove the hybrid battery carrier sheet No. 3.

- (3) Disconnect the connector and electrical key oscillator clamp.

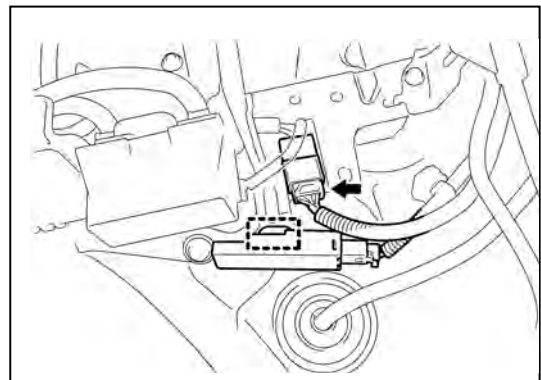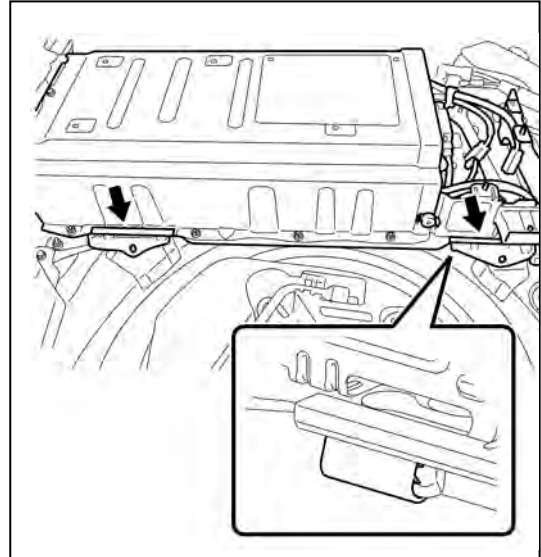


- (4) Remove the 4 bolts shown in the illustration.
- (5) Remove the HV battery.

Notice:

To prevent the wire harness from being caught, make sure to bundle the wire harness using insulating tape or equivalent.

- (6) The HV battery pack is recyclable. Contact your Toyota distributor (if included on the HV battery caution label) or contact the nearest Toyota dealer (see the next page for samples of the HV battery caution label).

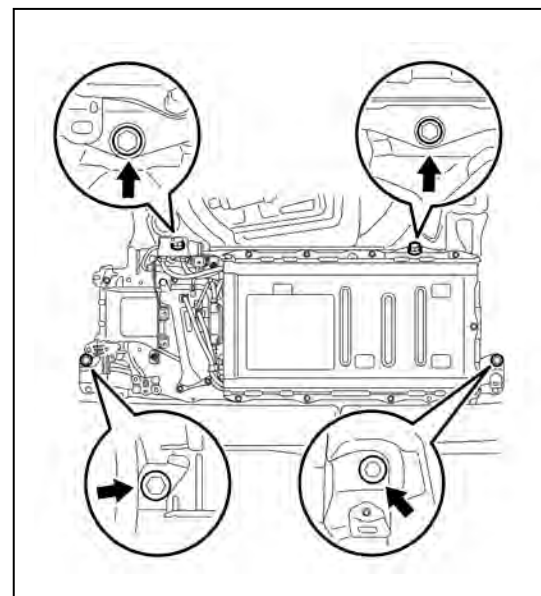








Caution:







After removing the HV battery, do not reinstall the service plug grip to the HV battery.

HV Battery Caution Label







1. For U.S.A.


| | | | |
|--|--|--|----------|
| ⚠ DANGER | |        | |
| High Voltage Inside/Alkaline Electrolyte | | Ni-MH | |
| <p>To avoid injuries, burns or electric shocks:</p> <ul style="list-style-type: none"> • Never disassemble this battery unit or remove its covers. -Service by Qualified Technician.- • Avoid contact alkaline electrolyte with eyes, skin or clothes. In event of accident, flush with water and get medical help immediately. • Keep children away from this unit. • Do not puncture or impact on this unit when operating forklift, or expose to open flame or incinerate, or expose to liquids when storing this unit, as excessive heat may generate fire and electrolyte may leak out. | | | |
| To the Qualified EV Technicians: | | | |
| Be sure to read the Repair Manual when servicing or replacing the battery. | | | |
| HV Battery Recycling Information | | | |
| <ul style="list-style-type: none"> • Please transport this battery in accordance with all applicable laws. • Be sure to consult your dealer or the following address for replacing and disposing of this battery. | | | |
| Residents In U.S.A. | | Residents In PUERTO RICO | |
| ♦ TOYOTA MOTOR SALES U.S.A., INC. ♦ SERVO PACIFIC INC. TORRANCE, CAL. 90501 HONOLULU, HAWAII 96813 Phone: 1-800-331-4331 Phone: 808-839-2273 | | ♦ TOYOTA DE PUERTO RICO HATO REY, PUERTO RICO Phone: 787-751-1000 | |
| | | | B |

2. For Canada

| | | | | | |
|---|--|---|----------|--|--|
| ⚠ DANGER | | High Voltage Inside / Alkaline Electrolyte | | Haute tension à l'intérieur / Electrolyte alcalin | |
|       | | • Never disassemble this battery unit or remove its covers. -Service by Qualified Technician.- • Avoid contact alkaline electrolyte with eyes, skin or clothes. In event of accident, flush with water and get medical help immediately. • Keep children away from this unit. • Do not puncture or impact on this unit when operating forklift, or expose to open flame or incinerate, or expose to liquids when storing this unit, as excessive heat may generate fire and electrolyte may leak out. | | • Ne jamais démonter cet ensemble batterie ni enlever ses couvercles. -Confier l'entretien à un technicien qualifié.- • Éviter tout contact de l'électrolyte alcalin avec les yeux, la peau ou les vêtements. En cas d'accident, rincer à l'eau et contacter un médecin immédiatement. • Garder cet ensemble hors de portée des enfants. • Ne pas percer cet ensemble et ne pas lui faire subir d'impact lors de l'utilisation du chariot élévateur. Ne pas l'exposer à une flamme vive ni l'incinérer. Ne pas l'exposer à un liquide lors du stockage. Une chaleur excessive pourrait provoquer un incendie et l'électrolyte pourrait fuir. | |
| Ni-MH | | To the Qualified EV Technicians: | | A l'attention des techniciens spécialistes en véhicules électriques: | |
| Be sure to read the Repair Manual when servicing or replacing the battery. | | Veillez à lire le manuel de réparation lors de l'entretien ou du remplacement de la batterie. | | Veillez à lire le manuel de réparation lors de l'entretien ou du remplacement de la batterie. | |
| HV Battery Recycling Information | | Information sur le recyclage de batterie de véhicule hybride | | Information sur le recyclage de batterie de véhicule hybride | |
| <ul style="list-style-type: none"> • Please transport this battery in accordance with all applicable laws. • Be sure to consult your dealer or the following address for replacing and disposing of this battery. TOYOTA CANADA INC. ONE TOYOTA PLACE SCARBOROUGH, ONTARIO M1H 1H6 Phone: 1-888-TOYOTA-3 (1-888-863-6228) URL: www.toyota.ca | | <ul style="list-style-type: none"> • Prière de transporter cette batterie conformément à toutes les lois applicables. • Pour le remplacement et la mise au rebut de cette batterie, veillez à consulter un votre concessionnaire ou se renseigner à l'adresse suivante. | | <ul style="list-style-type: none"> • Prière de transporter cette batterie conformément à toutes les lois applicables. • Pour le remplacement et la disposition de cette batterie, se rassurer de consulter un votre concessionnaire ou distributeur national, comme mentionnées dans le guide des concessionnaires. | |
| | | | C | | |

3. For Europe


| | | | | | |
|---|--|---|----------|--|--|
| ⚠ DANGER | | High Voltage Inside / Alkaline Electrolyte | | Haute tension à l'intérieur / Electrolyte alcalin | |
|       | | • Never disassemble this battery unit or remove its covers. -Service by Qualified Technician.- • Avoid contact alkaline electrolyte with eyes, skin or clothes. In event of accident, flush with water and get medical help immediately. • Keep children away from this unit. • Do not puncture or impact on this unit when operating forklift, or expose to open flame or incinerate, or expose to liquids when storing this unit, as excessive heat may generate fire and electrolyte may leak out. | | • Ne jamais démonter cet ensemble batterie ni enlever ses couvercles. -Confier l'entretien à un technicien qualifié.- • Éviter tout contact de l'électrolyte alcalin avec les yeux, la peau ou les vêtements. En cas d'accident, rincer à l'eau et contacter un médecin immédiatement. • Garder cet ensemble hors de portée des enfants. • Ne pas percer cet ensemble et ne pas lui faire subir d'impact lors de l'utilisation du chariot élévateur. Ne pas l'exposer à une flamme vive ni l'incinérer. Ne pas l'exposer à un liquide lors du stockage. Une chaleur excessive pourrait provoquer un incendie et l'électrolyte pourrait fuir. | |
| Ni-MH | | To the Qualified EV Technicians: | | A l'attention des techniciens spécialistes en véhicules électriques: | |
| Be sure to read the Repair Manual when servicing or replacing the battery. | | Veillez à lire le Repair Manual when servicing or replacing the battery. | | Veillez à lire le manuel de réparation lors de l'entretien ou du remplacement de la batterie. | |
| HV Battery Recycling Information | | Information sur le recyclage de batterie de véhicule hybride | | Information sur le recyclage de batterie de véhicule hybride | |
| <ul style="list-style-type: none"> • Please transport this battery in accordance with all applicable laws. • Be sure to consult your dealer or your national distributor as mentioned in your Dealer Guide-Book for replacing and disposing of this battery. | | <ul style="list-style-type: none"> • Prière de transporter cette batterie conformément à toutes les lois applicables. • Pour le remplacement et la disposition de cette batterie, se rassurer de consulter un votre concessionnaire ou distributeur national, comme mentionnées dans le guide des concessionnaires. | | <ul style="list-style-type: none"> • Prière de transporter cette batterie conformément à toutes les lois applicables. • Pour le remplacement et la disposition de cette batterie, se rassurer de consulter un votre concessionnaire ou distributeur national, comme mentionnées dans le guide des concessionnaires. | |
| | | | D | | |

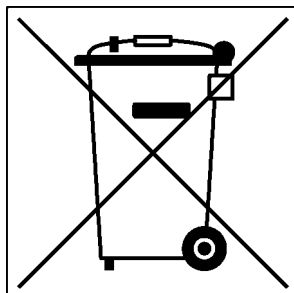

4. Russia

| | |
|---|--|
|  ОПАСНО Ni-MH | Высокое напряжение/щелочной электролит Во избежание травм, ожогов и поражений электрическим током: •Никогда не разбирайте аккумуляторную батарею и не снимайте с нее крышку. - Осуществляйте обслуживание аккумуляторной батареи у специалиста надлежащей квалификации - •Избегайте попадания щелочного электролита в глаза, на кожу или на одежду. В случае попадания электролита следует промыть пораженный участок водой и немедленно обратиться за медицинской помощью. •Не подпускайте детей к аккумуляторной батарее. •Избегайте прокола аккумуляторной батареи или ударов по ней при работе с вилочным погрузчиком. Не оставляйте аккумуляторную батарею вблизи открытого огня и не сжигайте ее, а также не подвергайте воздействию жидкостей во время хранения. Излишнее нагревание может вызвать пожар или утечку электролита. |
| | Информация для сертифицированных автоэлектриков: Перед обслуживанием или заменой аккумуляторной батареи ознакомьтесь с руководством по ремонту. |
| | Информация об утилизации аккумуляторной батареи гибридного автомобиля •Транспортировка аккумуляторной батареи должна осуществляться в соответствии со всеми применимыми законами. •Относительно замены и способов утилизации аккумуляторной батареи проконсультируйтесь с дилером или дистрибьютором в Вашей стране, указанными в Руководстве по гарантийному обслуживанию. |

F

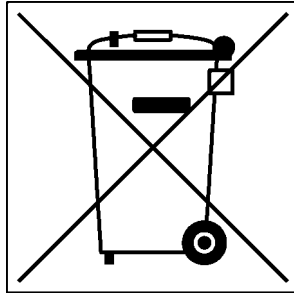

Product Safety Data Sheet Information

| HYBRID BATTERY ASSY, HV | | Prismatic Nickel Metal-hydride Battery Module | |
|-------------------------|----------------------------|---|----------|
| Parts Name | Parts No. | Model name | PSDS |
| BATTERY ASSY, HV | EV-PNR22A (G9280-47080) | EV-MP6R5R02 (GEN II) | Attached |
| BATTERY ASSY, HV | EV-PNR34A (G9280-75010) | EV-MP6R5R02 (GEN II) | Attached |
| | | | |

Product Safety Data Sheet

This product (a battery) is an "Article" pursuant to 29CFR1910.1200 and, as such, is not subject to the OSHA Hazard Communication Standard requirements for preparation of a Material Safety Data Sheets, (MSDS).
This Product Safety Data Sheet is prepared only to provide information to our customers.

1. PRODUCT IDENTIFICATION

| | | |
|-----|------------------------------|--|
| 1.1 | Product name | Prismatic Nickel Metal Hydride Battery (Module) |
| 1.2 | Applicable models | Plastic Case Prismatic Module EV-MP6R5R01 (GEN I) EV-MP6R5R02 (GEN II) |
| 1.3 | Product use | Hybrid Vehicle Battery |
| 1.4 | Name of manufacturer | Panasonic EV Energy Co., Ltd. |
| 1.5 | Address of manufacturer | 20,Okasaki,Kosai-City,Shizuoka, 431-0422 Japan |
| 1.6 | Phone number of manufacturer | +81-53-577-3592 (Japan) |
| 1.7 | Name of person in charge | Osamu Takahashi |
| 1.8 | Issue number | P0157 |

2. COMPOSITION & INGREDIENT INFORMATION

| Chemical name | Chemical symbol | CAS. No. | Exposure limits in air | |
|----------------------------------|---------------------|------------|------------------------|----------------------|
| | | | ACGIH | OSHA |
| Positive electrode, composed of: | | | | |
| •Nickel hydroxide | Ni(OH) ₂ | 12054-48-7 | 0.2mg/m ³ | 1mg/m ³ |
| •Nickel | Ni | 7440-02-0 | 0.2mg/m ³ | 1mg/m ³ |
| •Cobalt | Co | 7440-48-4 | 0.02mg/m ³ | 0.1mg/m ³ |
| Negative electrode, composed of: | | | | |
| •Hydrogen absorbing alloy | *1 | | | |
| •Iron | Fe | 7439-89-6 | NA | NA |
| Alkaline electrolyte | *2 | | | |

*1: Main contents contained in hydrogen absorbing alloy
 Nickel(Ni)-CAS#7440-02-0, Cobalt(Co)-CAS#7440-48-4,
 Manganese (Mn)-CAS#7439-96-5, Aluminum (Al)-CAS#7429-90-5,
 Rare earths: Lanthanum (La)-CAS#7439-91-0, Cerium (Ce)-CAS#7440-45-1,
 Neodymium (Nd)-CAS#7440-00-8, Praseodymium (Pr)-CAS#7440-10-0

*2: Main contents contained in alkaline electrolyte
 Potassium hydroxide (KOH)-CAS#1310-58-3,
 Sodium hydroxide (NaOH)-CAS#1310-73-2,
 Lithium hydroxide (LiOH)-CAS#1310-65-2

3. HAZARD IDENTIFICATION

This product is not dangerous as long as it is used for prescribed purposes and in accordance with its designated usage. As the product is a storage device for electricity, it may give the user an electric shock. It has no adverse effect on human health or the environment unless the pack and cell casings are breached.

| | | |
|-----|------------------------------|---|
| 3.1 | Physical and chemical hazard | This product does not constitute a physical and chemical hazard as long as it is used for prescribed purposes and in accordance with its designated usage. The alkaline electrolyte or materials in the battery may be dangerous if they leak out of the casing due to dismantle or breach of the battery. This product may cause electric shock, fire, or injury if it is used for purposes other than those prescribed or without following the designated usage. |
|-----|------------------------------|---|

| | | |
|---|---|--|
| 3.2 | Hazard to human health | This product is not hazardous to human health in normal use. However, if the product dismantles or is breached, the alkaline electrolyte or materials that may leak out of the outer casing may adversely affect human health. This product contains both nickel compounds and cobalt, which are classified as carcinogens by IARC and NTP. |
| 3.3 | Hazard to environment | This product is not hazardous to the environment as long as it is used for prescribed purposes and in accordance with its designated usage. However, the contents of the product may have an adverse effect on the environment in the event of their leakage from the casing due to dismantling or breach of the battery. |
| 4. FIRST AID MEASURES | | |
| In the event of the leakage of the alkaline electrolyte or alkaline mixed gas from the battery, the user may come into contact with the liquid or inhale the gas. In such an event, take the appropriate first aid measures from the following. | | |
| 4.1 | Eye contact | Contact may cause corneal injury and blindness. Wash eyes with large amounts of running water for at least 15 minutes. Seek medical treatment immediately. If appropriate actions are not taken, eye disorders may result. |
| 4.2 | Skin contact | Wash the contact area with plenty of water. Seek medical treatment immediately. Clothing, shoes, and socks, etc. which have come into contact with alkaline electrolyte should be taken off immediately. If appropriate actions are not taken, skin inflammation may occur. |
| 4.3 | Inhalation | Move the exposed person to fresh air area immediately. Cover up the affected person with a blanket. Seek medical treatment immediately. |
| 4.4 | Ingestion | Do not induce vomiting. Seek medical treatment immediately. |
| 5. FIREFIGHTING MEASURES | | |
| In the event of a battery fire, take the following measures. | | |
| 5.1 | Extinguishing media and method | (1) Use a dry powder acrylonitrile butadiene styrene (ABS) fire extinguisher for fire-fighting. (2) Extinguishing a fire with a large amount of water may be an effective method. However, this should be considered as a supplementary means. If there are no readily available large amounts of water, use dry sand instead; as the application of only a small amount of water may temporarily act as an accelerant and affect the fire adversely while the hydrogen storage alloy is burning. |
| 5.2 | Exposure controls and personal protection for fire-fighting | Use air-breathing apparatus when a greater risk is predicted, as noxious fumes may be produced. |
| 5.3 | Fire spread prevention | (1) In the case of fire, remove surrounding inflammables immediately. (2) In the case of fire in peripheral devices, move the battery to a safe place immediately. |
| 6. ACCIDENTAL RELEASE MEASURES | | |
| Take the following measures if the alkaline electrolyte has leaked out of the battery. | | |
| 6.1 | | Wipe out the alkaline electrolyte with a cloth. Dispose of the cloth used to wipe out the electrolyte in accordance with applicable laws and regulations. |

| 7. HANDLING & STORAGE INFORMATION | | |
|---|---------------------------------------|--|
| Observe the following cautions and prohibited items. Handle the battery carefully. | | |
| 7.1 | Prohibited items | (1) Short-circuiting Short-circuiting may cause burn injury due to ignition or heating effect. (2) Dismantle or modification Alkaline electrolyte leaks when the battery (cell) disintegrates. (3) Overcharging or over-discharging Oxygen or hydrogen may be produced when the battery is overcharged or over-discharged. (4) Use in an airtight container The container may explode due to the gas produced from the battery. |
| 7.2 | Cautions | (1) Do not stack a battery on another battery. (2) Do not store batteries on electrically conductive surfaces such as metals. (3) Wear protective glasses and rubber gloves while handling batteries. |
| 8. EXPOSURE CONTROLS & PERSONAL PROTECTION | | |
| Take the following measures in the event of leakage of the alkaline electrolyte or alkaline mixed gas from the battery. | | |
| 8.1 | Facilities | (1) Store the product in a depository with local exhaust systems for ventilation. (2) Install an exhaust system or exhaust port when the product is used in a container. |
| 8.2 | Protective equipment | Wear protective glasses, protective gloves, and disaster masks. |
| 9. PHYSICAL & CHEMICAL PROPERTIES | | |
| 9.1 | Physical state | Solid |
| 9.2 | Order | No order |
| 9.3 | pH | Not applicable (ELECTROLYTE : >12) |
| 9.4 | Freezing point | Not applicable |
| 9.5 | Boiling point | Not applicable (ELECTROLYTE : 100°C; Water) |
| 9.6 | Evaporation rate | Not applicable |
| 9.7 | Vapor pressure | Not applicable |
| 9.8 | Vapor density | Not applicable |
| 9.9 | Solubility (Water) | Not applicable (Electrolyte is soluble.) |
| 10. STABILITY & REACTIVITY | | |
| This product is stable as long as it is used for prescribed purposes and in accordance with its designated usage. However, short-circuiting, overcharging/over-discharging, and long-term storage in a high-temperature environment may lead to the ignition or explosion of the battery. | | |
| 10.1 | Possible causes of fire | Sparks due to short-circuit. A large current is applied to a module or a cell. |
| 10.2 | Possible causes of explosion | The battery will not explode by itself unless the safety valve is frequently activated and the battery is kept in an airtight container, in which case the oxygen and hydrogen produced from the battery may trigger an explosion. |
| 10.3 | Possible causes of fire and explosion | (1) Overcharging or over-discharging (2) The temperature of the battery at 100°C or higher (3) Overcharging or over-discharging of the battery in an airtight container located close to a heat source |
| 11. TOXICOLOGICAL INFORMATION | | |
| This product is not hazardous as long as it is used for prescribed purposes and in accordance with its designated usage. If the battery disintegrates or is breached, the alkaline electrolyte or contents that have leaked out of the casing may adversely affect human health. | | |
| | Carcinogenicity | The nickel-plated iron of this product is not harmful as long as it is used for prescribed purposes and in accordance with its designated usage. This product contains both nickel compounds and cobalt, which are classified as carcinogens by the International Agency for Research on Cancer (IARC) and the National Toxicology Program (NTP). |

| | | |
|--|--|---|
| 12. DISPOSAL | | |
| | | Batteries should be disposed in accordance with designated provisions by vehicle manufacturers or dealers. |
| 13. TRANSPORTATION INFORMATION | | |
| Refer to "14. REGULATORY INFORMATION" for applicable laws and regulations. | | |
| 13.1 | Label of contents | The surface of the casing should clearly show that the product is a nickel metal hydride battery. The notice "Non-spillable" should also be added when the product is transported. Refer to "14. REGULATORY INFORMATION" for applicable laws and regulations. |
| 13.2 | No short-circuit | The battery terminals should be designed so that external short-circuiting can be avoided. Make sure that batteries do not cause short circuiting during the packaging process. |
| 13.3 | No damage and overturn | Use sufficiently strong materials for packaging boxes so that the product is not damaged due to vibration, shocks, falls, stacking, and so on. Pack the product so that the battery does not fall sideways, and is not inverted during transportation. |
| 13.4 | Protection from rain water | Avoid contact with rain water during storage and transportation. |
| 13.5 | Protection from fire and high temperatures | Do not place the product close to fire during storage and transportation. Avoid storage in a high-temperature environment. Example: Avoid leaving batteries for disposal in a parked vehicle under the scorching sun. |
| 14. REGULATORY INFORMATION | | |
| 14.1 | Hazardous materials transportation (Hazardous shipping transportation and storage regulations) | (1) United Nations (Transport of Dangerous Goods) • UN Number 2800 • Classes 8 • Special Provision 238 |
| | | (2) International Air Transport Association (IATA) • UN Number 2800 • Classes 8 • Special Provision A67 |
| | | (3) International Maritime Dangerous Goods (IMDG) • UN Number 2800 • Classes 8 • Special Provision 29,238 |
| | | (4) Department of Transportation (DOT) • UN Number 2800 • Classes 8 • Special Provision 49 CFR 173.159(d) |
| 15. OTHER INFORMATION | | |
| 15.1 | Cautions | (1) Cautions and prohibited items in this Data Sheet relate to only normal use. Take appropriate safety measures suited for the environment when the product is used for special purposes. (2) This Data Sheet provides only the information of the product, and is not to be taken as a warranty. (3) It is intended for use by persons with technical skills and at their own discretion and risk. (4) The user is responsible for determining that any usage of the data or information in this Data Sheet is in accordance with associated federal, state, and local laws and regulations. |
| 15.2 | Date of creation/revision | November 10, 2008 |